

# How to mark your ballot using Verity Touch Writer



Use one of the following tools:

**Move** wheel and **Select** button



Tactile switches  
(or your sip-and-puff)



Touch screen



**Note:** If you want to listen to instructions and ballot choices, use headphones or a neckloop.

**1** If multiple languages are available, select one.



**2** Enter your access code and select **Accept**.



**3** When you're ready, select **Begin Voting**.




**4** Select each choice; then select **Next** to move to the next contest.



**5** Review your ballot. When you're ready, select **Print**.



**6** Select **Yes, print my ballot**.

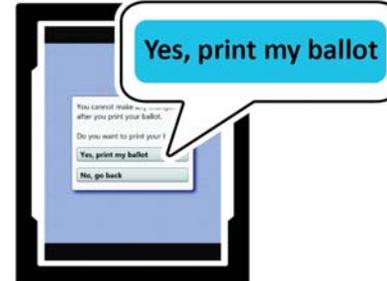

**7** Retrieve your ballot from the printer.

