

# Brunswick County Public Utilities - NC

PO Box 249  
Bolivia, NC 28422-0249

## LELAND N.C.

Client Project# NORTHWEST WATER PLANT  
Samples Received: 10/3/2025

### Analytical Report 1025-742

#### PFAS by Isotope Dilution (non-potable water)

Report Issue Date: 10/29/2025

I certify that to the best of my knowledge all analytical data presented in this report have been checked for completeness, accuracy, errors and legibility in addition to having been conducted in accordance with approved protocol, and that all deviations and analytical problems are summarized in the appropriate narrative(s). This analytical report was prepared in Portable Document Format (.PDF) and contains 29 pages. This report shall not be reproduced except in full without approval of the laboratory. This will provide assurance that parts of the report are not taken out of context.

Amendment(s):

Signature:



Alexandra Mejia, Quality Assurance Associate I



Enthalpy Analytical, LLC – Wilmington  
Amanda Valois, Project Manager  
amvalois@montrose-env.com / www.enthalpy.com  
O: (910) 212-5858  
2714 Exchange Drive, Wilmington, NC 28405

# Table of Contents

Case Narrative .....	3
General Reporting Notes .....	6
Results .....	12
Summary of Results .....	13
Detailed Results .....	15
QC Data .....	21
Blanks .....	22
Controls .....	25
Sample Custody .....	27
Chain of Custody .....	28

# Narrative Summary



# Enthalpy Analytical Narrative Summary

Company	Brunswick County Public Utilities - NC
Job No.	1025-742-1
Client ID.	NORTHWEST WATER PLANT Site: LELAND N.C.

## 1. Custody

Shane Santos received the samples at 4.8 °C after being relinquished by Brunswick County Public Utilities - NC.

The samples were received in good condition. Prior to, during, and after analysis, the samples were kept under lock with access only to authorized personnel by Enthalpy Analytical, LLC.

**Table 1 - Sample Inventory**

EU Lab Sample ID	Client Sample ID	Matrix	Received
1025-742-001-1	100325-S01	aqueous	2025-10-03
1025-742-001-1A	100325-S01	aqueous	2025-10-03
1025-742-002-1	100325-E01	aqueous	2025-10-03
1025-742-002-1A	100325-E01	aqueous	2025-10-03

## 2. Methods and Analytes

A list of analytes of interest and corresponding methods of analysis is shown in Table 3. Abbreviations are defined in the listed Appendices.

**Table 3 - Methods and Analytes**

EU Method	Analytes	Cleanup Method
EU047	Brunswick List	ENVI-Carb

## 3. Analysis

The samples were analyzed using LC/MS/MS instruments Gimli and Jetfire.

The samples were analyzed using more than one batch preparation and instrument sequence to include all analytes of interest

Polar compound PFPrA in the samples, including the method blank (MB) and Ongoing Precision Recovery (OPR) samples, was analyzed by direct inject calibration.

## 4. Calibration

In the initial calibration, the reported analytes exhibited  $R^2$  of  $\geq 0.99$ . The reported analytes in the calibration standards, Initial Calibration Verification (ICV) and continuing calibration (concal) met the accuracy criterion for native analytes.

# Enthalpy Analytical Narrative Summary

Company	Brunswick County Public Utilities - NC
Job No.	1025-742-1
Client ID.	NORTHWEST WATER PLANT Site: LELAND N.C.

## 5. QC Notes

Ongoing Precision Recovery (OPR) control limits have not been established for some analytes of interest.

Except where noted below, the QC sample analyses passed all method criteria.

QC samples that did not meet method acceptance criteria were:

- OPR\_118984\_PFAS (PFPrA)

Analyte(s) that deviate from method recovery criteria in the ongoing precision recovery (OPR) QC sample were not detected >LOQ in the samples. Data is reported without adverse impact.

PFAS by Isotope Dilution (non-potable water) samples were extracted within 28 days, and extracts analyzed within 28 days.

## 6. Reporting Notes

The results presented in this report are representative of the samples as provided to the laboratory.

This report provides all results including detections below LOD following client instruction.

Due to matrix influence on chromatographic peak shape and expected retention time window (RTW), the sample extracts were reinjected for NFDHA and PFEESA.

Some labeled extraction standards (ES) in the analyses recovered outside method control limits for ES recovery, as denoted by the "Q" qualifier. The target analytes are quantified based on their ratio to their labeled standard analogs. As a result, low or high labeled standard recovery do not cause any change to ratios or contribute any additional error in the measurement of the target analytes. When detected at a signal-to-noise above 10:1 the ES peak area is used to quantify its respective target analyte using accepted isotope dilution principles. The data is reported without adverse impact.

These analyses met the requirements of the TNI Standard. Any deviations from the requirements of the reference method or TNI Standard have been stated above.

Enthalpy Analytical, LLC in Wilmington NC is accredited by the Louisiana Department of Environmental Quality to the 2016 TNI Standard under certificate number 05075.

## General Reporting Notes – Data Qualifiers

The following are general reporting notes that are applicable to all Enthalpy Analytical, LLC - Wilmington, NC data reports, unless specifically noted otherwise.

### General Data Qualifiers

- Ac - Alternate calculation flag indicates the es recovery was calculated using the opening concal when either of the following situations is encountered in the data processing software: the ES recovery is over 400% or the JS is not detected.
- B – The analyte was found in the method blank, at a concentration that was at least 10% of the amount in the sample.
- Cxx – Two or more congeners co-elute. In EDDs, C denotes the lowest IUPAC congener in a co-elution group and additional co-eluters for the group ('xx') are shown with the number of the lowest IUPAC co-eluter.
- E – The reported concentration exceeds the calibration range (upper point of the calibration curve). For HRMS data, this condition does not imply additional measurement uncertainty. For LC-MS/MS data, these values should be considered as having measurement uncertainty higher than values within the calibration range.
- EDL – Estimated Detection Level: The EDL is unique to isotope dilution methods and reflects the conditions of analysis at the time of analysis, including the equipment used. Where the MDL is a static value, the EDL is a dynamic value.
- EMPC – Estimated Maximum Possible Concentration: EMPC is specific to Dioxin/Furan tests to indicate the determined ion-abundance ratio was outside the allowed theoretical range (usually due to being near the detection limit, although it can very rarely be caused by a co-eluting interference). The EMPC concentration is adjusted to reflect the value at the theoretical ion-abundance ratio.
- I/IR – The ion ratio between the primary and secondary ions was observed to be outside the method criteria. The analyte concentration may be inaccurate due to interference.
- J – The analyte has a concentration below the minimum calibration level (LOQ value) but greater than the LOD. These values should be considered as having measurement uncertainty higher than values within the calibration range
- L - For reports containing PFAS analytes only, this flag indicates that an analyte has a concentration below the Minimum Detection Limit (MDL) . The reported concentration is not recommended for regulatory use as the analyte signal may have a signal-to-noise ratio less than the criteria deemed necessary to be considered a detected analyte.
- LOD – Limit of Detection: For reports conforming to the DOD ELAP QSM, this is the QSM-defined LOD. For reports conforming to TNI requirements (but not DOD ELAP QSM requirements), this value is the minimum detection limit (MDL). The LOD is adjusted for sample weight or volume.



## General Reporting Notes – Data Qualifiers

- LOQ – Limit of Quantitation: For reports conforming to the DOD ELAP QSM, this is the QSM-defined LOQ. For reports conforming to TNI requirements (but not DOD ELAP QSM requirements), this value is the reporting limit (RL). The LOQ is adjusted for sample weight or volume.
- <LOD() – Analyte was not found at a concentration high enough to be reported as detected. It is reported as less than the LOD, and the LOD is given in the parentheses.
- <LOQ() – Analyte was not found at a concentration high enough to be reported as above the QSM-defined LOQ or TNI defined Reporting Limit. It is reported as less than the LOQ, and the LOQ is given in the parentheses.
- ND – Indicates a non-detect.
- NR – Indicates a value that is not reportable due to issues observed in sample preparation or analysis.
- PR – The associated congener(s) is(are) poorly resolved.
- QI – Indicates the presence of a quantitative interference.
- RL – Reporting Limit. Lowest reportable value. The level is higher than the MDL.
- SI – Denotes “Single Ion Mode” and is utilized for PCBs where the secondary ion trace has a significantly elevated noise level due to background PFK. Responses for such peaks are calculated using an EMPC approach based solely on the primary ion area(s) and may be considered estimates.
- U – The analyte was not detected.
- V / Q – The labeled standard recovery is not within method control limits.
- X – Indicates the result is from re-injection/repeat/second-column analysis.

### **Lab Identifiers/ Data Attributes**

- AR – Indicates use of the archived portion of the sample extract.
- CU – Indicates a sample that required additional clean-up prior to HRMS injection/processing.
- D – Dilution Data. Result was obtained from the analysis of a dilution. The number that follows the “D” indicates the dilution factor.
- DE – Indicates a dilution performed with the addition of ES (Extraction Standard) solution.
- DUP – Designation for a duplicate sample.
- MS – Designation for a matrix spike.
- MSD – Designation for a matrix spike duplicate.



## General Reporting Notes – Data Qualifiers

- R – Indicates a re-extraction of the sample.
- RJ – Indicates a reinjection of the sample extract.
- S – Indicates a sample split. The number that follows the “S” indicates the split factor.
- SAT – Indicates an analyte saturated the detector.

PFAS Compound Acronym List			Methods					
Acronym	CAS #	Compound Name	SOP EU047	EPA 1633 (B-24)	EPA 1633X	EPA 537.1	EPA 533	EPA 8327*
<b>Target Analytes</b>								
PFBA	375-22-4	Perfluorobutanoic Acid	X	X	X		X	X
PFPeA	2706-90-3	Perfluoropentanoic Acid	X	X	X		X	X
PFHxA	307-24-4	Perfluorohexanoic Acid	X	X	X	X	X	X
PFHpA	375-85-9	Perfluoroheptanoic Acid	X	X	X	X	X	X
PFOA	335-67-1	Perfluorooctanoic Acid	X	X	X	X	X	X
PFNA	375-95-1	Perfluorononanoic Acid	X	X	X	X	X	X
PFDA	335-76-2	Perfluorodecanoic acid	X	X	X	X	X	X
PFUnA (PFUnDA)	2058-94-8	Perfluoroundecanoic acid	X	X	X	X	X	X
PFDoA (PFDoDA)	307-55-1	Perfluorododecanoic acid	X	X	X	X		X
PFTrDA (PFTriA, PFTrDA)	72629-94-8	Perfluorotridecanoic acid	X	X	X	X		X
PFTeDA (PFTA, PFTreA)	376-06-7	Perfluorotetradecanoic acid	X	X	X	X		X
PFBS	375-73-5	Perfluorobutane sulfonic acid	X	X	X	X	X	X
PFPeS	2706-91-4	Perfluoropentane sulfonic acid	X	X	X		X	X
PFHxS	355-46-4	Perfluorohexane sulfonic acid	X	X	X	X	X	X
PFHpS	375-92-8	Perfluoroheptane sulfonic acid	X	X	X		X	X
PFOS	1763-23-1	Perfluorooctane sulfonic acid	X	X	X	X	X	X
PFNS	68259-12-1	Perfluorononane sulfonic acid	X	X	X			X
PFDS	335-77-3	Perfluorodecane sulfonic acid	X	X	X			X
4:2 FTS	757124-72-4	4:2 fluorotelomer sulfonic acid	X	X	X		X	X
6:2 FTS	27619-97-2	6:2 fluorotelomer sulfonic acid	X	X	X		X	X
8:2 FTS	39108-34-4	8:2 fluorotelomer sulfonic acid	X	X	X		X	X
10:2 FTS	120226-60-0	Fluorotelomer sulfonate 10:2						X
FHxSA	41997-13-1	Perfluorohexanesulfonamide			X			X
PFOSA (FOSA)	754-91-6	Perfluorooctane sulfonamide	X	X	X			X
N-MeFOSAA	2355-31-9	N-methyl perfluorooctane sulfonamido acetic acid	X	X	X	X		X
N-MeFOSA	31506-32-8	N-methylperfluoro-1-octanesulfonamide	X	X	X			X
N-MeFOSE	24448-09-7	2-(N-methylperfluoro-1-octanesulfonamido)-ethanol	X	X	X			X
N-EtFOSAA	2991-50-6	N-ethyl perfluorooctane sulfonamido acetic acid	X	X	X	X		X
N-EtFOSA	4151-50-2	N-ethylperfluoro-1-octanesulfonamide	X	X	X			X
N-EtFOSE	1691-99-2	2-(N-Ethylperfluoro-1-octanesulfonamido)-ethanol	X	X	X			X
HFPO-DA	13252-13-6	Hexafluoropropyleneoxide dimer acid (GenX)	X	X	X	X	X	X
11Cl-PF3OUds	763051-92-9	11-chloroeicosafluoro-3-oxaundecane-1-sulfonic acid	X	X	X	X	X	X
9Cl-PF3ONS	756426-58-1	9-chlorohexadecafluoro-3-oxanonane-1-sulfonic acid	X	X	X	X	X	X
ADONA	919005-14-4	4,8-dioxa-3H-perfluorononanoic acid	X	X	X	X	X	X
PFESA	113507-82-7	Perfluoro(2-ethoxyethane)sulfonic acid		X	X		X	X
PFMOBA (PFMBA)	863090-89-5	Perfluoro-4-methoxybutanoic acid		X	X		X	X
NFDHA	151772-58-6	Nonafluoro-3,6-dioxaheptanoic acid		X	X		X	X
PFMOPrA (PFMPA)	377-73-1	Perfluoro-3-methoxypropanoic acid		X	X		X	X
PFPrA	422-64-0	Perfluoropropionic acid, 2,2,3,3,3-Pentafluoropropionic acid			X			X
PFPrS (PFPS)	423-41-6	Perfluoropropanesulfonic acid			X			X



PFAS Compound Acronym List			Methods					
Acronym	CAS #	Compound Name	SOP EU047	EPA 1633 (B-24)	EPA 1633X	EPA 537.1	EPA 533	EPA 8327*
PFMOAA	674-13-5	Perfluoro-2-methoxyacetic acid;			X			X
PFO2HxA	39492-88-1	Perfluoro (3,5-dioxahexanoic) acid			X			X
PFO3OA	39492-89-2	Perfluoro (3,5,7-trioxaoctanoic) acid			X			X
PFO4DA	39492-90-5	Perfluoro (3,5,7,9-tetraoxadecanoic) acid			X			X
PFO5DA	39492-91-6	Perfluoro(3,5,7,9,11-pentaoxadodecanoic) acid			X			X
Nafion Byproduct 1 (PS Acid)	29311-67-9	1,1,2,2-tetrafluoro-2-[1,1,1,2,3,3-hexafluoro-3-(1,2,2-trifluoroethenoxy)propan-2-yl]oxyethanesulfonic acid			X			X
Nafion Byproduct 2 (Hydro-PS Acid)	749836-20-2	Perfluoro-2-[[perfluoro-3-(perfluoroethoxy)-2-propanyl]oxy]ethanesulfonic acid (Hydro-PS Acid)			X			X
PEPA	267239-61-2	Perfluoro-2-ethoxypropanoic acid			X			X
PMPA	13140-29-9	Perfluoro-2-methoxypropanoic acid			X			X
PFECA-G, (PFPE-1)	801212-59-9	4-(Heptafluoroisopropoxy)hexafluorobutanoic acid, Perfluoro-4-isopropoxybutanoic acid			X			X
PFHxDA	67905-19-5	Perfluorohexadecanoic acid			X			
R-PSDA (Nafion Byproduct 4)	2416366-18-0	Perfluoro-4-(2-sulfoethoxy)pentanoic acid; 2,2,3,3,4,5,5-Octafluoro-4-(1,1,2,2-tetrafluoro-2-sulfoethoxy)pentanoic acid			X			X
Hydrolyzed PSDA (Nafion Byproduct 5)	2416366-19-1	2-fluoro-2-[1,1,2,3,3,3-hexafluoro-2-(1,1,2,2-tetrafluoro-2-sulfoethoxy)propoxy]-acetic acid			X			X
R-PSDCA (Nafion Byproduct 6)	2416366-21-5	1,1,2,2-tetrafluoro-2-[1,2,2,3,3-pentafluoro-1-(trifluoromethyl)propoxy] ethanesulfonic acid			X			X
EVE Acid	69087-46-3	2,2,3,3-tetrafluoro-3-((1,1,1,2,3,3-hexafluoro-3-[(1,2,2-trifluoroethenyl)oxy]propan-2-yl)oxy)propionic acid			X			X
FBSA	30334-69-1	Perfluorobutylsulfonamide			X			X
MeFBSA	68298-12-4	1-Butanesulfonamide; (N-(Methyl)nonafluorobutanesulfonamide); 1,1,2,2,3,3,4,4,4-nonafluoro-N-methyl-1-Butanesulfonamide			X			X
Hydro-EVE Acid	773804-62-9	2,2,3,3-Tetrafluoro-3-[[1,1,1,2,3,3-hexafluoro-3-(1,2,2,2-tetrafluoroethoxy)propan-2-yl]oxy}propanoic acid			X			X
R-EVE Acid	2416366-22-6	4-(2-carboxy-1,1,2,2-tetrafluoroethoxy)-2,2,3,3,4,5,5,5-octafluoro-pentanoic acid			X			X
NVHOS	1132933-86-8	Perfluoroethoxysulfonic acid; 1,1,2,2-Tetrafluoro-2-(1,2,2,2-tetrafluoroethoxy)ethane-1-sulfonic acid			X			X

PFAS Compound Acronym List			Methods					
Acronym	CAS #	Compound Name	SOP EU047	EPA 1633 (B-24)	EPA 1633X	EPA 537.1	EPA 533	EPA 8327*
PFDoS	79780-39-5	Perfluorododecane sulfonic acid		X	X			X
PFOA	16517-11-6	Perfluorooctadecanoic acid			X			
3:3 FTCA	356-02-5	2H,2H,3H,3H-Perfluorohexanoic acid		X	X			X
5:3 FTCA	914637-49-3	2H,2H,3H,3H-Perfluorooctanoic acid		X	X			X
7:3 FTCA	812-70-4	2H,2H,3H,3H-Perfluorodecanoic acid		X	X			X
N-AP-FHxSA	50598-28-2	N-(3-(Dimethylamino)propyl)tridecafluoro-1-hexanesulfonamide			X			X
N-CMAmP-6:2 FOSA	34455-29-3	N-(Carboxymethyl)-N,N-dimethyl-3-(((3,3,4,4,5,5,6,6,7,7,8,8,8-tridecafluorooctyl)sulfonyl)amino)1-propanaminium			X			X
BPAF	1478-61-1	Bisphenol AF			X			X
HQ-115	90076-65-6	Bis(trifluoromethane)sulfonimide lithium salt			X			X

\* Accreditation pending

# Results

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Summary

	Compound	CAS	100325-S01 ng/L	100325-E01 ng/L
Acids	PFPPrA	422-64-0	ND U	ND U
	PFBA	375-22-4	4.02	3.78
	PFPeA	2706-90-3	7.62	7.51
	PFHxA	307-24-4	5.10	4.91
	PFHpA	375-85-9	2.30	2.24
	PFOA	335-67-1	4.54	4.54
	PFNA	375-95-1	0.529 J	0.525 J
	PFDA	335-76-2	0.237 J	0.175 J
	PFUnDA	2058-94-8	ND U	ND U
	PFDODA	307-55-1	ND U	ND U
	PFTTrDA	72629-94-8	ND U	ND U
	PFTeDA	376-06-7	ND U	ND U
	PFHxDA	67905-19-5	ND U	ND U
	Sulfonates	PFBS	375-73-5	3.91
PFPeS		2706-91-4	0.553	0.533 J
PFHxS		355-46-4	3.97	3.78
PFHpS		375-92-8	0.106 L	0.0670 L
PFOS		1763-23-1	9.18	8.89
PFNS		68259-12-1	ND U	ND U
PFDS		335-77-3	ND U	ND U
4:2 FTS		757124-72-4	ND U	ND U
6:2 FTS		27619-97-2	ND U	0.00309 L
8:2 FTS		39108-34-4	ND U	ND U
10:2 FTS		120226-60-0	ND U	ND U
Sulfonamidos	FBSA	30334-69-1	0.488 J	0.442 J
	N-EtFOSA	4151-50-2	ND U	ND U
	N-EtFOSAA	2991-50-6	ND U	ND U
	N-EtFOSE	1691-99-2	ND U	ND U
	N-MeFOSA	31506-32-8	ND U	ND U
	N-MeFOSAA	2355-31-9	ND U	ND U
	N-MeFOSE	24448-09-7	ND U	ND U
	PFOSA	754-91-6	ND U	ND U
PFECAs	ADONA	919005-14-4	ND U	ND U
	EVE Acid	69087-46-3	ND U	ND U
	HFPO-DA	13252-13-6	4.69	4.91
	Hydro-EVE Acid	773804-62-9	0.131 L	0.278 J
	NFDHA	151772-58-6	ND U	ND U
	PEPA	267239-61-2	2.19	3.38
	PFECA-G	801212-59-9	ND U	ND U
	PFMOAA	674-13-5	13.7	2.31
	PFMOBA	863090-89-5	ND U	ND U
	PFMOPrA	377-73-1	ND U	ND U

## Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)

Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

### Summary

	Compound	CAS	100325-S01 ng/L	100325-E01 ng/L
PFECAs	PFO2HxA	39492-88-1	6.97	6.90
	PFO3OA	39492-89-2	1.62	1.76
	PFO4DA	39492-90-5	ND U	ND U
	PFO5DA	39492-91-6	ND U	ND U
	PMPA	13140-29-9	6.47	6.81
	R-EVE	2416366-22-6	9.38	13.1
PFESAs	11Cl-PF3OUdS	763051-92-9	ND U	ND U
	9Cl-PF3ONS	756426-58-1	ND U	ND U
	Hydrolyzed PSDA	2416366-19-1	6.91	6.85
	Nafion Byproduct 1 (PS Acid)	29311-67-9	ND U	ND U
	Nafion Byproduct 2 (Hydro-PS Acid)	749836-20-2	0.371 L	0.410 L
	NVHOS	1132933-86-8	4.83	5.67
	PFEESA	113507-82-7	ND U	ND U
	R-PSDA	2416366-18-0	10.7	10.0
R-PSDCA	2416366-21-5	ND U	ND U	

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	100325-S01	Prep Batch	EU118976
Sampling Site		Analyst	bmay
Enthalpy ID	1025-742-001-1	Instrument	Gimli
Matrix	aqueous	Sample Vol mL	286.46
Sampling Date	2025-10-03 11:30	Extract Vol mL	0.4
Received Date	2025-10-03	Split Factor	N/A
Prep Date	2025-10-06 16:10	Method Code	EU-047-NPW
AnalysisDate	2025-10-07 01:03		
SampleType	Sample		
Bottle ID	A		

	Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags
Acids	PFBA	375-22-4	GI061025025	4.02	0.222	0.559			
	PFPeA	2706-90-3	GI061025025	7.62	0.160	0.559			
	PFHxA	307-24-4	GI061025025	5.10	0.187	0.559			
	PFHpA	375-85-9	GI061025025	2.30	0.195	0.559			
	PFOA	335-67-1	GI061025025	4.54	0.128	0.559			
	PFNA	375-95-1	GI061025025	0.529	0.126	0.559			J
	PFDA	335-76-2	GI061025025	0.237	0.160	0.559			J
	PFUnDA	2058-94-8	GI061025025	ND	0.126	0.559			U
	PFDoDA	307-55-1	GI061025025	ND	0.227	0.559			U
	PFTrDA	72629-94-8	GI061025025	ND	0.185	0.559			U
	PFTeDA	376-06-7	GI061025025	ND	0.213	0.559			U
	PFHxDA	67905-19-5	GI061025025	ND	0.297	0.559			U
	Sulfonates	PFBS	375-73-5	GI061025025	3.91	0.297	0.559		
PFPeS		2706-91-4	GI061025025	0.553	0.115	0.526			
PFHxS		355-46-4	GI061025025	3.97	0.431	0.512			
PFHpS		375-92-8	GI061025025	0.106	0.271	0.532			L
PFOS		1763-23-1	GI061025025	9.18	0.295	0.517			
PFNS		68259-12-1	GI061025025	ND	0.173	0.538			U
PFDS		335-77-3	GI061025025	ND	0.293	0.538			U
4:2 FTS		757124-72-4	GI061025025	ND	0.0724	0.523			U
6:2 FTS		27619-97-2	GI061025025	ND	0.264	0.532			U
8:2 FTS		39108-34-4	GI061025025	ND	0.125	0.535			U
10:2 FTS	120226-60-0	GI061025025	ND	0.428	0.559			U	
Sulfonamidos	FBSA	30334-69-1	GI061025025	0.488	0.265	0.559			J
	N-EtFOSA	4151-50-2	GI061025025	ND	0.346	0.559			U
	N-EtFOSAA	2991-50-6	GI061025025	ND	0.227	0.559			U
	N-EtFOSE	1691-99-2	GI061025025	ND	0.855	2.51			U
	N-MeFOSA	31506-32-8	GI061025025	ND	0.230	0.559			U
	N-MeFOSAA	2355-31-9	GI061025025	ND	0.157	0.559			U
	N-MeFOSE	24448-09-7	GI061025025	ND	0.531	2.51			U
	PFOSA	754-91-6	GI061025025	ND	0.0784	0.559			U
PFECAs	ADONA	919005-14-4	GI061025025	ND	0.151	0.529			U
	EVE Acid	69087-46-3	GI061025025	ND	0.178	1.26			U
	HFPO-DA	13252-13-6	GI061025025	4.69	0.0592	0.559			
	Hydro-EVE Acid	773804-62-9	GI061025025	0.131	0.183	0.559			L
	NFDHA	151772-58-6	GI081025029	ND	0.117	0.559			U
	PEPA	267239-61-2	GI061025025	2.19	0.105	0.559			
	PFECA-G	801212-59-9	GI061025025	ND	0.0745	0.559			U
	PFMOAA	674-13-5	GI061025025	13.7	0.283	0.559			
	PFMOBA	863090-89-5	GI061025025	ND	0.937	1.26			U
	PFMOPrA	377-73-1	GI061025025	ND	0.199	0.559			U
	PFO2HxA	39492-88-1	GI061025025	6.97	0.180	0.559			
	PFO3OA	39492-89-2	GI061025025	1.62	0.257	0.559			
	PFO4DA	39492-90-5	GI061025025	ND	0.442	2.79			U
	PFO5DA	39492-91-6	GI061025025	ND	0.447	2.79			U
	PMPA	13140-29-9	GI061025025	6.47	0.132	0.559			
R-EVE	2416366-22-6	GI061025025	9.38	0.927	1.26				
PFESAs	11Cl-PF3OUds	763051-92-9	GI061025025	ND	0.264	0.526			U
	9Cl-PF3ONS	756426-58-1	GI061025025	ND	0.358	0.520			U
	Hydrolyzed PSDA	2416366-19-1	GI061025025	6.91	0.372	0.559			
	Nafion Byproduct 1 (PS Acid)	29311-67-9	GI061025025	ND	0.298	0.559			U
	Nafion Byproduct 2 (Hydro-PS Acid)	749836-20-2	GI061025025	0.371	0.463	0.559			L
	NVHOS	1132933-86-8	GI061025025	4.83	0.0861	0.559			
	PFEESA	113507-82-7	GI081025029	ND	0.168	0.559			U
R-PSDA	2416366-18-0	GI061025025	10.7	2.46	2.46				
R-PSDCA	2416366-21-5	GI061025025	ND	0.236	0.559			U	
ES	MPFBA		GI061025025				20-150%	94.4%	
	M5PFPeA		GI061025025				20-150%	131%	
	M3PFBS		GI061025025				20-150%	150%	Q
	M2-4:2 FTS		GI061025025				20-150%	100%	
	M5PFHxA		GI061025025				20-150%	106%	
	M3HFPO-DA		GI061025025				20-150%	120%	

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	100325-S01	Prep Batch	EU118976
Sampling Site		Analyst	bmay
Enthalpy ID	1025-742-001-1	Instrument	Gimli
Matrix	aqueous	Sample Vol mL	286.46
Sampling Date	2025-10-03 11:30	Extract Vol mL	0.4
Received Date	2025-10-03	Split Factor	N/A
Prep Date	2025-10-06 16:10	Method Code	EU-047-NPW
AnalysisDate	2025-10-07 01:03		
SampleType	Sample		
Bottle ID	A		

Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags
M4PFHpA		GI061025025				20-150%	97.3%	
M3PFHxS		GI061025025				20-150%	97.7%	
M2-6:2 FTS		GI061025025				20-150%	85.8%	
M8PFOA		GI061025025				20-150%	96.6%	
M9PFNA		GI061025025				20-150%	89.6%	
M8PFOS		GI061025025				20-150%	92.3%	
M2-8:2 FTS		GI061025025				20-150%	74.4%	
M8FOSA-I		GI061025025				20-150%	80.8%	
M6PFDA		GI061025025				20-150%	87.3%	
d3-N-MeFOSAA		GI061025025				20-150%	65.8%	
d5-N-EtFOSAA		GI061025025				20-150%	62.8%	
M7PFUdA		GI061025025				20-150%	77.9%	
MPFDoA		GI061025025				20-150%	68.6%	
M2PFTeDA		GI061025025				20-150%	41.3%	
d3-N-MeFOSA		GI061025025				10-200%	29.9%	
d5-N-EtFOSA		GI061025025				10-200%	27.4%	
d7-N-MeFOSE		GI061025025				10-200%	53.4%	
d9-N-EtFOSE		GI061025025				10-200%	49.3%	

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	100325-S01		
Sampling Site			
Enthalpy ID	1025-742-001-1A	Prep Batch	EU118984
Matrix	aqueous	Analyst	jogres
Sampling Date	2025-10-03 11:30	Instrument	Jetfire
Received Date	2025-10-03	Sample Vol mL	0.1
Prep Date	2025-10-07 16:00	Extract Vol mL	0.2
AnalysisDate	2025-10-09 18:25	Split Factor	N/A
SampleType	Sample	Method Code	EU-047-NPW
Bottle ID	B		

	Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags
Acids	PFPrA	422-64-0	J091025-10091825	ND	700	1530			U
ES	13C3-PFPrA		J091025-10091825				20-150%	134%	

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	100325-E01	Prep Batch	EU118976
Sampling Site		Analyst	bmay
Enthalpy ID	1025-742-002-1	Instrument	Gimli
Matrix	aqueous	Sample Vol mL	277.91
Sampling Date	2025-10-03 11:30	Extract Vol mL	0.4
Received Date	2025-10-03	Split Factor	N/A
Prep Date	2025-10-06 16:10	Method Code	EU-047-NPW
AnalysisDate	2025-10-07 01:26		
SampleType	Sample		
Bottle ID	A		

	Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags	
Acids	PFBA	375-22-4	GI061025026	3.78	0.228	0.576				
	PFPeA	2706-90-3	GI061025026	7.51	0.165	0.576				
	PFHxA	307-24-4	GI061025026	4.91	0.193	0.576				
	PFFhA	375-85-9	GI061025026	2.24	0.202	0.576				
	PFOA	335-67-1	GI061025026	4.54	0.132	0.576				
	PFNA	375-95-1	GI061025026	0.525	0.130	0.576			J	
	PFDA	335-76-2	GI061025026	0.175	0.165	0.576			J	
	PFUnDA	2058-94-8	GI061025026	ND	0.130	0.576			U	
	PFDODA	307-55-1	GI061025026	ND	0.234	0.576			U	
	PFTrDA	72629-94-8	GI061025026	ND	0.191	0.576			U	
	PFTeDA	376-06-7	GI061025026	ND	0.219	0.576			U	
	PFFhDA	67905-19-5	GI061025026	ND	0.306	0.576			U	
	Sulfonates	PFBS	375-73-5	GI061025026	3.79	0.306	0.576			
		PFPeS	2706-91-4	GI061025026	0.533	0.118	0.542			J
PFFhS		355-46-4	GI061025026	3.78	0.444	0.527				
PFFpS		375-92-8	GI061025026	0.0670	0.279	0.548			L	
PFOS		1763-23-1	GI061025026	8.89	0.304	0.533				
PFNS		68259-12-1	GI061025026	ND	0.179	0.555			U	
PFDS		335-77-3	GI061025026	ND	0.302	0.555			U	
4:2 FTS		757124-72-4	GI061025026	ND	0.0747	0.539			U	
6:2 FTS		27619-97-2	GI061025026	0.00309	0.272	0.548			L	
8:2 FTS		39108-34-4	GI061025026	ND	0.129	0.551			U	
10:2 FTS	120226-60-0	GI061025026	ND	0.441	0.576			U		
Sulfonamidos	FBSA	30334-69-1	GI061025026	0.442	0.273	0.576			J	
	N-EtFOSA	4151-50-2	GI061025026	ND	0.356	0.576			U	
	N-EtFOSAA	2991-50-6	GI061025026	ND	0.234	0.576			U	
	N-EtFOSE	1691-99-2	GI061025026	ND	0.882	2.59			U	
	N-MeFOSA	31506-32-8	GI061025026	ND	0.237	0.576			U	
	N-MeFOSAA	2355-31-9	GI061025026	ND	0.162	0.576			U	
	N-MeFOSE	24448-09-7	GI061025026	ND	0.547	2.59			U	
	PFOSA	754-91-6	GI061025026	ND	0.0808	0.576			U	
PFECAs	ADONA	919005-14-4	GI061025026	ND	0.156	0.545			U	
	EVE Acid	69087-46-3	GI061025026	ND	0.184	1.30			U	
	HFPO-DA	13252-13-6	GI061025026	4.91	0.0610	0.576				
	Hydro-EVE Acid	773804-62-9	GI061025026	0.278	0.189	0.576			J	
	NFDHA	151772-58-6	GI081025030	ND	0.121	0.576			U	
	PEPA	267239-61-2	GI061025026	3.38	0.108	0.576				
	PFECA-G	801212-59-9	GI061025026	ND	0.0768	0.576			U	
	PFMOAA	674-13-5	GI061025026	2.31	0.291	0.576				
	PFMOBA	863090-89-5	GI061025026	ND	0.966	1.30			U	
	PFMOPrA	377-73-1	GI061025026	ND	0.205	0.576			U	
	PFO2HxA	39492-88-1	GI061025026	6.90	0.185	0.576				
	PFO3OA	39492-89-2	GI061025026	1.76	0.264	0.576				
	PFO4DA	39492-90-5	GI061025026	ND	0.455	2.88			U	
	PFO5DA	39492-91-6	GI061025026	ND	0.461	2.88			U	
	PMPA	13140-29-9	GI061025026	6.81	0.136	0.576				
	R-EVE	2416366-22-6	GI061025026	13.1	0.955	1.30				
PFESAs	11Cl-PF3OUds	763051-92-9	GI061025026	ND	0.272	0.542			U	
	9Cl-PF3ONS	756426-58-1	GI061025026	ND	0.369	0.536			U	
	Hydrolyzed PSDA	2416366-19-1	GI061025026	6.85	0.383	0.576				
	Nafion Byproduct 1 (PS Acid)	29311-67-9	GI061025026	ND	0.308	0.576			U	
	Nafion Byproduct 2 (Hydro-PS Acid)	749836-20-2	GI061025026	0.410	0.477	0.576			L	
	NVHOS	1132933-86-8	GI061025026	5.67	0.0887	0.576				
	PFEESA	113507-82-7	GI081025030	ND	0.173	0.576			U	
R-PSDA	2416366-18-0	GI061025026	10.0	2.54	2.54					
R-PSDCA	2416366-21-5	GI061025026	ND	0.243	0.576			U		
ES	MPPFBA		GI061025026				20-150%	46.1%		
	M5PPPeA		GI061025026				20-150%	107%		
	M3PFBS		GI061025026				20-150%	115%		
	M2-4:2 FTS		GI061025026				20-150%	98.2%		
	M5PPHxA		GI061025026				20-150%	107%		
	M3HFPO-DA		GI061025026				20-150%	119%		

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	100325-E01	Prep Batch	EU118976
Sampling Site		Analyst	bmay
Enthalpy ID	1025-742-002-1	Instrument	Gimli
Matrix	aqueous	Sample Vol mL	277.91
Sampling Date	2025-10-03 11:30	Extract Vol mL	0.4
Received Date	2025-10-03	Split Factor	N/A
Prep Date	2025-10-06 16:10	Method Code	EU-047-NPW
AnalysisDate	2025-10-07 01:26		
SampleType	Sample		
Bottle ID	A		

Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags
M4PFHpA		GI061025026				20-150%	98.3%	
M3PFHxS		GI061025026				20-150%	101%	
M2-6:2 FTS		GI061025026				20-150%	84.8%	
M8PFOA		GI061025026				20-150%	98.6%	
M9PFNA		GI061025026				20-150%	95.6%	
M8PFOS		GI061025026				20-150%	98.5%	
M2-8:2 FTS		GI061025026				20-150%	80.8%	
M8FOSA-I		GI061025026				20-150%	88.8%	
M6PFDA		GI061025026				20-150%	99.5%	
d3-N-MeFOSAA		GI061025026				20-150%	73.4%	
d5-N-EtFOSAA		GI061025026				20-150%	70.7%	
M7PFUdA		GI061025026				20-150%	95.2%	
MPFDoA		GI061025026				20-150%	94.7%	
M2PFTeDA		GI061025026				20-150%	70.5%	
d3-N-MeFOSA		GI061025026				10-200%	22.2%	
d5-N-EtFOSA		GI061025026				10-200%	20.6%	
d7-N-MeFOSE		GI061025026				10-200%	76.4%	
d9-N-EtFOSE		GI061025026				10-200%	69.8%	

# Enthalpy Analytical


Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	100325-E01		
Sampling Site			
Enthalpy ID	1025-742-002-1A	Prep Batch	EU118984
Matrix	aqueous	Analyst	jogres
Sampling Date	2025-10-03 11:30	Instrument	Jetfire
Received Date	2025-10-03	Sample Vol mL	0.1
Prep Date	2025-10-07 16:00	Extract Vol mL	0.2
AnalysisDate	2025-10-09 18:37	Split Factor	N/A
SampleType	Sample	Method Code	EU-047-NPW
Bottle ID	B		

	Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags
Acids	PFPrA	422-64-0	J091025-10091837	ND	700	1530			U
ES	13C3-PFPrA		J091025-10091837				20-150%	156%	Q

# QC Data

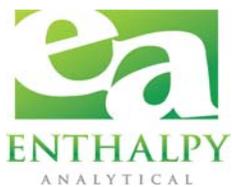

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	MB_118976_PFAS	Prep Batch	EU118976
Sampling Site		Analyst	bmay
Enthalpy ID	MB_118976_PFAS	Instrument	Gimli
Matrix	aqueous	Sample Vol mL	250
Sampling Date		Extract Vol mL	0.4
Received Date		Split Factor	N/A
Prep Date	2025-10-06 16:10	Method Code	EU-047-NPW
AnalysisDate	2025-10-06 23:10		
SampleType	Blank		
Bottle ID	-		

	Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags	
Acids	PFBA	375-22-4	GI061025020	ND	0.254	0.640			U	
	PFPeA	2706-90-3	GI061025020	ND	0.183	0.640			U	
	PFHxA	307-24-4	GI061025020	ND	0.214	0.640			U	
	PFHpA	375-85-9	GI061025020	ND	0.224	0.640			U	
	PFOA	335-67-1	GI061025020	ND	0.146	0.640			U	
	PFNA	375-95-1	GI061025020	ND	0.145	0.640			U	
	PFDA	335-76-2	GI061025020	ND	0.183	0.640			U	
	PFUnDA	2058-94-8	GI061025020	ND	0.145	0.640			U	
	PFDoDA	307-55-1	GI061025020	ND	0.260	0.640			U	
	PFTrDA	72629-94-8	GI061025020	ND	0.212	0.640			U	
	PFTeDA	376-06-7	GI061025020	ND	0.244	0.640			U	
	PFHxDA	67905-19-5	GI061025020	ND	0.340	0.640			U	
	Sulfonates	PFBS	375-73-5	GI061025020	ND	0.340	0.640			U
		PFPeS	2706-91-4	GI061025020	ND	0.131	0.603			U
		PFHxS	355-46-4	GI061025020	ND	0.494	0.586			U
PFHpS		375-92-8	GI061025020	ND	0.310	0.610			U	
PFOS		1763-23-1	GI061025020	ND	0.338	0.593			U	
PFNS		68259-12-1	GI061025020	ND	0.199	0.616			U	
PFDS		335-77-3	GI061025020	ND	0.336	0.616			U	
4:2 FTS		757124-72-4	GI061025020	ND	0.0830	0.600			U	
6:2 FTS		27619-97-2	GI061025020	ND	0.302	0.610			U	
8:2 FTS		39108-34-4	GI061025020	ND	0.143	0.613			U	
10:2 FTS	120226-60-0	GI061025020	ND	0.490	0.640			U		
Sulfonamidos	FBSA	30334-69-1	GI061025020	ND	0.304	0.640			U	
	N-EtFOSA	4151-50-2	GI061025020	ND	0.396	0.640			U	
	N-EtFOSAA	2991-50-6	GI061025020	ND	0.260	0.640			U	
	N-EtFOSE	1691-99-2	GI061025020	ND	0.980	2.88			U	
	N-MeFOSA	31506-32-8	GI061025020	ND	0.264	0.640			U	
	N-MeFOSAA	2355-31-9	GI061025020	ND	0.180	0.640			U	
	N-MeFOSE	24448-09-7	GI061025020	ND	0.608	2.88			U	
	PFOSA	754-91-6	GI061025020	ND	0.0898	0.640			U	
PFECAs	ADONA	919005-14-4	GI061025020	ND	0.173	0.606			U	
	EVE Acid	69087-46-3	GI061025020	ND	0.204	1.44			U	
	HFPO-DA	13252-13-6	GI061025020	ND	0.0678	0.640			U	
	Hydro-EVE Acid	773804-62-9	GI061025020	ND	0.210	0.640			U	
	NFDHA	151772-58-6	GI081025027	ND	0.135	0.640			U	
	PEPA	267239-61-2	GI061025020	ND	0.120	0.640			U	
	PFECA-G	801212-59-9	GI061025020	ND	0.0854	0.640			U	
	PFMOAA	674-13-5	GI061025020	0.0284	0.324	0.640			L	
	PFMOBA	863090-89-5	GI061025020	ND	1.07	1.44			U	
	PFMOPrA	377-73-1	GI061025020	ND	0.228	0.640			U	
	PFO2HxA	39492-88-1	GI061025020	ND	0.206	0.640			U	
	PFO3OA	39492-89-2	GI061025020	ND	0.294	0.640			U	
	PFO4DA	39492-90-5	GI061025020	ND	0.506	3.20			U	
	PFO5DA	39492-91-6	GI061025020	ND	0.512	3.20			U	
	PMPA	13140-29-9	GI061025020	ND	0.151	0.640			U	
R-EVE	2416366-22-6	GI061025020	ND	1.06	1.44			U		
PFESAs	11Cl-PF3OUds	763051-92-9	GI061025020	ND	0.302	0.603			U	
	9Cl-PF3ONS	756426-58-1	GI061025020	ND	0.410	0.596			U	
	Hydrolyzed PSDA	2416366-19-1	GI061025020	ND	0.426	0.640			U	
	Nafion Byproduct 1 (PS Acid)	29311-67-9	GI061025020	ND	0.342	0.640			U	
	Nafion Byproduct 2 (Hydro-PS Acid)	749836-20-2	GI061025020	ND	0.530	0.640			U	
	NVHOS	1132933-86-8	GI061025020	ND	0.0986	0.640			U	
	PFEESA	113507-82-7	GI081025027	ND	0.192	0.640			U	
	R-PSDA	2416366-18-0	GI061025020	ND	2.82	2.82			U	
R-PSDCA	2416366-21-5	GI061025020	ND	0.270	0.640			U		
ES	MPPFBA		GI061025020				20-150%	102%		
	M5PPPeA		GI061025020				20-150%	96.6%		
	M3PFBS		GI061025020				20-150%	93.4%		
	M2-4:2 FTS		GI061025020				20-150%	93.8%		
	M5PFHxA		GI061025020				20-150%	103%		
	M3HFPO-DA		GI061025020				20-150%	120%		

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	MB_118976_PFAS	Prep Batch	EU118976
Sampling Site		Analyst	bmay
Enthalpy ID	MB_118976_PFAS	Instrument	Gimli
Matrix	aqueous	Sample Vol mL	250
Sampling Date		Extract Vol mL	0.4
Received Date		Split Factor	N/A
Prep Date	2025-10-06 16:10	Method Code	EU-047-NPW
AnalysisDate	2025-10-06 23:10		
SampleType	Blank		
Bottle ID	-		

Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags
M4PFHpA		GI061025020				20-150%	95.1%	
M3PFHxS		GI061025020				20-150%	98.7%	
M2-6:2 FTS		GI061025020				20-150%	83.8%	
M8PFOA		GI061025020				20-150%	96.1%	
M9PFNA		GI061025020				20-150%	91.9%	
M8PFOS		GI061025020				20-150%	96.4%	
M2-8:2 FTS		GI061025020				20-150%	81.8%	
M8FOSA-I		GI061025020				20-150%	85.7%	
M6PFDA		GI061025020				20-150%	101%	
d3-N-MeFOSAA		GI061025020				20-150%	71.8%	
d5-N-EtFOSAA		GI061025020				20-150%	70.7%	
M7PFUdA		GI061025020				20-150%	96.8%	
MPFDoA		GI061025020				20-150%	93.4%	
M2PFTeDA		GI061025020				20-150%	81.5%	
d3-N-MeFOSA		GI061025020				10-200%	10.0%	
d5-N-EtFOSA		GI061025020				10-200%	11.9%	
d7-N-MeFOSE		GI061025020				10-200%	76.7%	
d9-N-EtFOSE		GI061025020				10-200%	75.9%	

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	MB_118984_PFAS	Prep Batch	EU118984
Sampling Site		Analyst	jogres
Enthalpy ID	MB_118984_PFAS	Instrument	Jetfire
Matrix	aqueous	Sample Vol mL	0.1
Sampling Date		Extract Vol mL	0.2
Received Date		Split Factor	N/A
Prep Date	2025-10-07 16:00	Method Code	EU-047-NPW
AnalysisDate	2025-10-09 18:02		
SampleType	Blank		
Bottle ID	-		

	Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags
Acids	PFPrA	422-64-0	J091025-10091802	ND	700	1530			U
ES	13C3-PFPrA		J091025-10091802				20-150%	141%	

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)

Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

Enthalpy ID	OPR_118976_PFAS	Prep Batch	EU118976	Sample Vol (mL)	250
Sample Name	OPR_118976_PFAS	Prep Date	2025-10-06 16:10	Extract Vol (mL)	0.4
Matrix	aqueous	Analysis Date	2025-10-06 23:32	Split Factor	N/A
Sampling Date		Analyst	bmay	Method Code	EU-047-NPW
Received Date		Instrument	Gimli	Sample Type	Control
		Bottle ID	-		

	Compound	CAS	InjFileName	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags	
Acids	PFBA	375-22-4	GI061025021	17.2	0.254	0.640	47.9-144%	85.9%		
	PFPeA	2706-90-3	GI061025021	17.4	0.183	0.640	41.7-159%	87.1%		
	PFHxA	307-24-4	GI061025021	17.4	0.214	0.640	43.2-154%	87.0%		
	PFHpA	375-85-9	GI061025021	17.2	0.224	0.640	42.1-155%	85.9%		
	PFOA	335-67-1	GI061025021	17.1	0.146	0.640	51.1-148%	85.4%		
	PFNA	375-95-1	GI061025021	17.4	0.145	0.640	51.6-153%	86.9%		
	PFDA	335-76-2	GI061025021	17.0	0.183	0.640	44.5-156%	85.0%		
	PFUnDA	2058-94-8	GI061025021	17.0	0.145	0.640	40.3-156%	85.2%		
	PFDoDA	307-55-1	GI061025021	17.3	0.260	0.640	40.4-158%	86.5%		
	PFTtDA	72629-94-8	GI061025021	18.8	0.212	0.640	42.2-201%	94.1%		
	PFTeDA	376-06-7	GI061025021	17.0	0.244	0.640	43-162%	85.1%		
	Sulfonates	PFBS	375-73-5	GI061025021	16.0	0.340	0.640	42.7-155%	90.4%	
		PFPeS	2706-91-4	GI061025021	16.6	0.131	0.603	40.3-152%	88.1%	
PFHxS		355-46-4	GI061025021	16.0	0.494	0.586	45-148%	87.3%		
PFHpS		375-92-8	GI061025021	17.1	0.310	0.610	39.8-166%	89.8%		
PFOS		1763-23-1	GI061025021	16.2	0.338	0.593	59.2-132%	87.6%		
PFNS		68259-12-1	GI061025021	17.1	0.199	0.616	38.1-153%	88.7%		
PFDS		335-77-3	GI061025021	16.6	0.336	0.616	28.6-148%	85.9%		
4:2 FTS		757124-72-4	GI061025021	15.1	0.0830	0.600	41.5-157%	80.6%		
6:2 FTS		27619-97-2	GI061025021	16.7	0.302	0.610	44.5-160%	87.7%		
8:2 FTS		39108-34-4	GI061025021	14.6	0.143	0.613	39.4-166%	75.9%		
Sulfonamidos	N-EtFOSA	4151-50-2	GI061025021	18.7	0.396	0.640	26.7-172%	93.3%		
	N-EtFOSAA	2991-50-6	GI061025021	17.3	0.260	0.640	42.8-156%	86.4%		
	N-EtFOSE	1691-99-2	GI061025021	80.6	0.980	2.88	38.9-161%	89.6%		
	N-MeFOSA	31506-32-8	GI061025021	18.8	0.264	0.640	26.4-183%	93.9%		
	N-MeFOSAA	2355-31-9	GI061025021	17.2	0.180	0.640	42-155%	85.9%		
	N-MeFOSE	24448-09-7	GI061025021	80.9	0.608	2.88	37.6-155%	89.9%		
	PFOSA	754-91-6	GI061025021	16.7	0.0898	0.640	39.1-158%	83.4%		
	ADONA	919005-14-4	GI061025021	17.1	0.173	0.606	32.2-151%	85.5%		
PFECAs	HFPO-DA	13252-13-6	GI061025021	17.2	0.0678	0.640	61.8-131%	86.0%		
	PFESAs	11Cl-PF3OUdS	763051-92-9	16.9	0.302	0.603	21.8-141%	84.5%		
PFESAs	9Cl-PF3ONS	756426-58-1	GI061025021	16.4	0.410	0.596	37.6-146%	82.2%		
	ES									
	MPFBA		GI061025021				20-150%	99.0%		
	M5PFPeA		GI061025021				20-150%	96.3%		
	M3PFBS		GI061025021				20-150%	99.2%		
	M2-4:2 FTS		GI061025021				20-150%	90.8%		
	M5PFHxA		GI061025021				20-150%	108%		
	M3HFPO-DA		GI061025021				20-150%	125%		
	M4PFHpA		GI061025021				20-150%	98.7%		
	M3PFHxS		GI061025021				20-150%	105%		
	M2-6:2 FTS		GI061025021				20-150%	89.6%		
	M8PFOA		GI061025021				20-150%	100%		
	M9PFNA		GI061025021				20-150%	98.0%		
	M8PFOS		GI061025021				20-150%	100%		
	M2-8:2 FTS		GI061025021				20-150%	87.1%		
	M8FOSA-I		GI061025021				20-150%	94.6%		
	M6PFDA		GI061025021				20-150%	103%		
	d3-N-MeFOSAA		GI061025021				20-150%	76.6%		
	d5-N-EtFOSAA		GI061025021				20-150%	75.4%		
	M7PFUDa		GI061025021				20-150%	99.1%		
	MPFDaA		GI061025021				20-150%	99.4%		
	M2PFTeDA		GI061025021				20-150%	87.4%		
	d3-N-MeFOSA		GI061025021				10-200%	14.8%		
	d5-N-EtFOSA		GI061025021				10-200%	16.4%		
	d7-N-MeFOSE		GI061025021				10-200%	90.3%		
	d9-N-EtFOSE		GI061025021				10-200%	89.6%		

# Enthalpy Analytical

Job No.: 1025-742-1 PFAS by Isotope Dilution (non-potable water)  
 Brunswick County Public Utilities - NC NORTHWEST WATER PLANT LELAND N.C.

## Details

Sample Name	OPR_118984_PFAS	Prep Batch	EU118984
Sampling Site		Analyst	jogres
Enthalpy ID	OPR_118984_PFAS	Instrument	Jetfire
Matrix	aqueous	Sample Vol mL	0.1
Sampling Date		Extract Vol mL	0.2
Received Date		Split Factor	N/A
Prep Date	2025-10-07 16:00	Method Code	EU-047-NPW
AnalysisDate	2025-10-09 18:13		
SampleType	Control		
Bottle ID	-		

	Compound	CAS	Injection File Name	Sample Concentration ng/L	LOD ng/L	LOQ ng/L	Recovery Limits	Recovery	Flags
Acids	PFPrA	422-64-0	J091025-10091813	35500	700	1530	40-150%	177%	Q
ES	13C3-PFPrA		J091025-10091813				20-150%	123%	

# Sample Custody



1025-742

# Chain of Custody Record

Enthalpy Ultratrace Job#: \_\_\_\_\_ COC Page 1 of 1

**Special Handling:**

- Standard Turn Around Time
- Rush Turn Around Time -- Date Needed \_\_\_\_\_
- All Fast TATs Subject to Approval by Enthalpy Analytical, Inc.
- All Samples Disposed of After 6 months Unless Otherwise Instructed.
- Enthalpy Analytical-Wilmington, NC has added enhancements to standard methods to improve accuracy, precision and permit an assessment of laboratory performance in the context of your specific data needs. For more information email Cindy.James@enthalpy.com.

Client Name: <u>BRUNSWICK COUNTY UTILITIES</u>	Project Number: _____	PO#: _____
Project Manager: <u>GLENN WALKER</u>	Site Name: <u>NORTHWEST WATER PLANT</u>	Telephone#: _____
Report To: <u>SAME</u>	Location: <u>LELAND N.C.</u>	Email: _____

This Chain of Custody is applicable to Non-Air samples. Standard TAT differ per analysis and are provided by request.

Client Special Instructions:						Sample Containers				Analyses:						Notes:			
Sample ID	Date	Time	Sample Volume	Type	Matrix	# of Bottles	# of Jars	# of Bags	# Other	Method 1613	Method 8290	Method 1668A/B/C PCE	PFAS by LC/MS/MS	PAHs by HRGC/HRMS	Sample on Hold		Method 23	ALL PFAS	
100325-S01	10/3/2025	11:30 AM	250 ml	G	NW	2												X	Please Add PFPrA and
100325-E01	10/3/2025	11:30 AM	250 ml	G	DW	2												X	PFHpA To The Testing.
																			Mark Hager Knows About
																			This If you Have Questions

**ORIGINAL  
IF NOT RED,  
DESTROY THIS COPY AFTER USE**

Relinquished By:	Date:	Received By:	Date:	Time:	Sample Temperature Upon Receipt:
PHIL MCCULLOCH	10/3/2025	<i>[Signature]</i>	10/3/25	14:35	<input checked="" type="checkbox"/> Iced <input type="checkbox"/> Ambient °C <u>4.8</u>
					<input type="checkbox"/> Iced <input type="checkbox"/> Ambient °C _____
					<input type="checkbox"/> Iced <input type="checkbox"/> Ambient °C _____

JOB ID:

Date / Time:

Initials:

OR

Client:

Cooler  of

Temp °C:

Thermometer ID:

Received via

- FedEx
- UPS
- DHL
- USPS
- Courier
- Other

*Check one*

On ice:

Melted ice:

Ambient:

*Check one*

in a Box:

in a Cooler:

Cooler in Box:

	Yes	No
Cooler seals:	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Sample seals:	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Good condition:	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Comment:

Cooler  of

Temp °C:

Thermometer ID:

Received via

- FedEx
- UPS
- DHL
- USPS
- Courier
- Other

*Check one*

On ice:

Melted ice:

Ambient:

*Check one*

in a Box:

in a Cooler:

Cooler in Box:

	Yes	No
Cooler seals:	<input type="checkbox"/>	<input type="checkbox"/>
Sample seals:	<input type="checkbox"/>	<input type="checkbox"/>
Good condition:	<input type="checkbox"/>	<input type="checkbox"/>

Comment:

Cooler  of

Temp °C:

Thermometer ID:

Received via

- FedEx
- UPS
- DHL
- USPS
- Courier
- Other

*Check one*

On ice:

Melted ice:

Ambient:

*Check one*

in a Box:

in a Cooler:

Cooler in Box:

	Yes	No
Cooler seals:	<input type="checkbox"/>	<input type="checkbox"/>
Sample seals:	<input type="checkbox"/>	<input type="checkbox"/>
Good condition:	<input type="checkbox"/>	<input type="checkbox"/>

Comment: