

County of Brunswick

3954 Clearwell Dr NE
Leland, NC 28451

Northwest Plant

Leland, NC
Samples Received: 1-24-19

Analytical Report (0119-721)

Isotope Dilution Method

PFAS



Enthalpy Analytical, LLC – Ultratrace

Phone: (910) 212-5858 / www.enthalpy.com
2714 Exchange Drive, Wilmington, NC 28405

I certify that to the best of my knowledge all analytical data presented in this report:

- Have been checked for completeness
- Are accurate, error-free, and legible
- Have been conducted in accordance with approved protocol, and that all deviations and analytical problems are summarized in the appropriate narrative(s)

This analytical report was prepared in Portable Document Format (.PDF) and contains _____ pages.

....."Report Issued Date: _____"



Summary of Results: Totals
**Enthalpy Ultratrace Batch #
10193**
PFAS

Analyte	Method Blank ng/L	12419-S01 ng/L		12419-E01 ng/L	
Acids					
PFBA	1.41	3.01	B	2.67	B
PFPeA	0.976	4.69	B	6.00	
PFHxA	7.49	9.52	B	7.81	B
PFHpA	ND	5.45		4.73	
PFOA	0.553	6.26		4.75	
PFNA	ND	1.02	J	0.525	J
PFDA	0.0751	1.69		0.324	JB
PFUnA	0.0408	0.434	J	0.0719	JB
PFDoA	ND	0.457	J	ND	
PFTTrA	ND	0.0484	J	ND	
PFTA	ND	ND		ND	
Sulfonates					
L-PFBS	ND	2.52		2.67	
PFPeS	ND	ND		ND	
PFHxS	ND	3.36		3.66	
PFHpS	ND	ND		0.125	
PFOS	ND	9.14		9.32	
PFNS	ND	ND		ND	
PFDS	0.802	ND		ND	
4:2 FTS	ND	ND		ND	
6:2 FTS	0.298	0.632	JB	0.994	JB
8:2 FTS	ND	ND		ND	
Other					
PFOSA	0.226	ND		ND	
N-MeFOSAA	ND	ND		ND	
N-EtFOSAA	ND	ND		ND	
HFPO-DA (Gen-X)	ND	ND		ND	
Lab Sample ID	MB_10193_PFA	0119-721_10193_001		0119-721_10193_002	

Enthalpy Analytical Narrative Summary

Company	County of Brunswick
Analyst	H. Allen
Parameters	PFAS

Client #	N/A
Job #	0119-721
# Samples	2

Custody	<p>Enthalpy Analytical Wilmington received the samples (via client courier) by Laura Boivin on 1/24/2019 on ice at 1.2°C in good condition.</p> <p>Prior to, during, and after analysis, the samples were stored in the laboratory with access only by authorized personnel of Enthalpy Analytical, LLC.</p>
Analysis	<p>The samples were analyzed by isotope dilution method for PFAS via LC/MS/MS. The analysis was completed using the following instrumentation: Waters Acquity UPLC equipped with Xevo TQ MS (Kili).</p> <p>The sample is spiked with ES, mixed well and centrifuged. An aliquot of supernatant is added to a measured volume of water and extracted via SPE. The elute is condensed, reconstituted with IS and analyzed.</p>
Calibration	<p>The analytes and labeled standards in the initial calibration exhibited RSDs less than 50%. All analytes passed the R² coefficient correlation criteria.</p> <p>The ICV and continuing calibration met the ±30% criteria for native analytes and ±50% criteria for labeled analytes.</p>
QC Notes	<p>The QC injection met the ±50% criteria for ES recoveries with the exception of M8PFOS which fell outside of the lower limits. JS Standards also met the ±50% method criteria.</p> <p>Some analytes were detected in the method blank at more than 1/10 the sample concentration. PFHxA was detected in the Method Blank at a concentration greater than LOQ or RL. These analytes detected in the samples were notated with a B qualifier.</p> <p>The samples were extracted within the 14-day from collection holding time. Extracts were analyzed within the 28-days from extraction to analysis holding time required by the method.</p>
Reporting Notes	<p>The results presented in this report are representative of the samples as provided to the laboratory.</p> <p>These analyses met the requirements of the TNI Standard. Any deviations from the requirements of the reference method or TNI Standard have been stated above.</p>



Enthalpy Analytical Narrative Summary

(continued)

Reporting Notes
(cont.)

The samples, calibrations and standards for the data presented in this report were analyzed at 2714 Exchange Drive, Wilmington, NC 28405.



General Reporting Notes – Data Qualifiers

The following are general reporting notes that are applicable to all Enthalpy Analytical, Inc.-Wilmington, NC data reports, unless specifically noted otherwise.

General Data Qualifiers / Data Attributes

- B – The analyte was found in the method blank, at a concentration that was at least 10% of the concentration in the sample.
- C – Two or more congeners co-elute. In EDDs, C denotes the lowest IUPAC congener in a co-elution group and additional co-eluters for the group are shown with the number of the lowest IUPAC co-eluter.
- E – The reported concentration exceeds the calibration range (upper point of the calibration curve).
- EMPC – Represents an estimated maximum possible concentration. EMPCs arise in cases where the signal/noise ratio is not sufficient for peak identification (the determined ion-abundance ratio is outside the allowed theoretical range), or where there is a co-eluting interference.
- J – Indicates that an analyte has a concentration below the reporting limit (lowest point of the calibration curve).
- ND – Indicates a non-detect.
- NR – Indicates a value that is not reportable.
- PR – Due to interference, the associated congener is poorly resolved.
- DI – Indicates the presence of a quantitative interference.
- SI – Denotes “Single Ion Mode” and is utilized for PCBs where the secondary ion trace has a significantly elevated noise level due to background PFK. Responses for such peaks are calculated using an EMPC approach based solely on the primary ion area(s) and may be considered estimates.
- U – The analyte was not detected. The Estimated Detection Limit (EDL) may be reported for this analyte.
- V – The labeled standard recovery was found to be outside of the method control limits.

DRBC/TMDL Specific Data Qualifiers / Data Attributes

- J – The reported result is an estimate. The value is less than the minimum calibration level but greater than the Estimated Detection Limit (EDL).
- U – The analyte was not detected in the sample at the Estimated Detection Limit (EDL).
- E – The reported concentration is an estimate. The value exceeds the upper calibration range (upper point of the calibration curve).



General Reporting Notes – Data Qualifiers

- D – Dilution Data. Result was obtained from the analysis of a dilution.
- B – Analyte found in the sample and associated method blank.
- Cxx – Co-elutes with the indicated congener, data is reported under the lowest IUPAC congener. ‘xx’ denotes the IUPAC number with the lowest numerical designated congener.
- NR – Analyte is not reportable because of problems in sample preparation or analysis.
- V – Labeled standard recovery is not within method control limits.
- X – Results from re-injection/repeat/second-column analysis.
- EMPC – Estimated Maximum Possible Concentration. Indicates that a peak is identified but did not meet the method specified ion-abundance ratio.


Lab Identifiers

- AR – Indicates use of the archived portion of the sample extract.
- CU – Indicates a sample that required additional clean-up prior to HRMS injection/processing.
- D – Indicates a dilution of the sample extract. The number that follows the “D” indicates the dilution factor.
- DE – Indicates a dilution performed with the addition of ES (Extraction Standard) solution.
- DUP – Designation for a duplicate sample.
- MS – Designation for a matrix spike.
- MSD – Designation for a matrix spike duplicate.
- RJ – Indicates a reinjection of the sample extract.
- S – Indicates a sample split. The number that follows the “S” indicates the split factor.

PFAS Compound Acronym List	
Acronym	Compound Name
Target Analytes	
PFBA	Perfluorobutanoic Acid
PFPeA	Perfluoropentanoic Acid
PFHxA	Perfluorohexanoic Acid
PFHpA	Perfluoroheptanoic Acid
PFOA	Perfluorooctanoic Acid
PFNA	Perfluorononanoic Acid
PFDA	Perfluorodecanoic acid
PFUnDA	Perfluoroundecanoic acid
PFDoDA (PFTDoA)	Perfluorododecanoic acid
PFTrDA (PFTrA)	Perfluorotridecanoic acid
PFTeDA (PFTA)	Perfluorotetradecanoic acid
PFBS	Perfluorobutane sulfonate
PFPeS	Perfluoropentane sulfonate
PFHxS	Perfluorohexane sulfonate
PFHpS	Perfluoroheptane sulfonate
PFOS	Perfluorooctane sulfonate
PFNS	Perfluorononane sulfonate
PFDS	Perfluorodecane sulfonate
4:2 FTS	4:2 fluorotelomer sulfonic acid
6:2 FTS	6:2 fluorotelomer sulfonic acid
8:2 FTS	8:2 fluorotelomer sulfonic acid
PFOSA	Perfluorooctane sulfonamide
N-MeFOSAA	N-methyl perfluorooctane sulfonamido acetic acid
N-EtFOSAA	N-ethyl perfluorooctane sulfonamido acetic acid
HFPO-DA	2,3,3,3-Tetrafluoro-2-(1,1,2,2,3,3,3-heptafluoropropoxy)-propanoic acid (Gen-X)
Extraction Standards	
M3PFBA	Perfluoro-n-[2,3,4-13C3]butanoic acid
M5PFPeA	Perfluoro-n-[13C5]pentanoic acid
M3PFBS	Sodium perfluoro-1-[2,3,4-13C3]-butanesulfonate
M2-4:2 FTS	Sodium 1H,1H,2H,2H-perfluoro-1-[1,2-13C2]-hexane sulfonate
M5PFHxA	Perfluoro-n-[1,2,3,4,6-13C5]hexanoic acid
M3HFPO-DA	2,3,3,3-Tetrafluoro-2-(1,1,2,2,3,3,3-heptafluoropropoxy)-13C3-propanoic acid
M4PFHpA	Perfluoro-n-[1,2,3,4-13C4]heptanoic acid
M3PFHxS	Sodium perfluoro-1-[1,2,3-13C3]-hexanesulfonate
M2-6:2 FTS	Sodium 1H,1H,2H,2H-perfluoro-1-[1,2-13C2]-octane sulfonate
M8PFOA	Perfluoro-n-[13C8]octanoic acid
M9PFNA	Perfluoro-n-[13C9]nonanoic acid
M8PFOS	Sodium perfluoro-1-[13C8]-octanesulfonate
M2-8:2 FTS	Sodium 1H,1H,2H,2H-perfluoro-1-[1,2-13C2]-decane sulfonate
M8FOSA	Perfluoro-1-[13C8]octanesulfonamide
M6PFDA	Perfluoro-n-[1,2,3,4,5,6-13C6]decanoic acid
d3-N-MeFOSAA	N-methyl-d3-perfluoro-1-octanesulfonamide
d5-N-EtFOSAA	N-ethyl-d5-perfluoro-1-octanesulfonamide
M7PFUnDA (M7PFUdA)	Perfluoro-n-[1,2,3,4,5,6,7-13C7]undecanoic acid
MPFDoA	Perfluoro-n-[1,2-13C2]dodecanoic acid
M2PFTeDA	Perfluoro-n-[1,2-13C2]tetradecanoic acid

Injection Standards	
MPFBA	Perfluoro-n-[13C4]butanoic acid
M2PFOA	Perfluoro-n-[1,2-13C2]octanoic acid
MPFDA	Perfluoro-n-[1,2-13C2]decanoic acid
MPFOS	Sodium perfluoro-1-[1,2,3,4-13C4]-octanesulfonate

Job 0119-721 report due Thursday Feb 07 2019

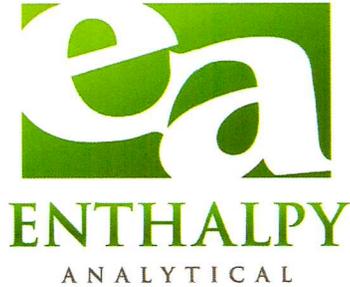

To	Glenn Walker	From	Lindsay Boone
Company	County of Brunswick	Customer PO	
Site		Sales Order	SO1033876
Customer Phone	910-612-5618	Date Due QA	Tuesday, February 05, 2019
Customer Email	glenn.walker@brunswickcountync.gov	Results Due	Thursday, February 07, 2019
Customer Project		Report Due	Thursday, February 07, 2019

Line	Method	Analytes	Quant	Dept	Objective	Status
1	WM-026 PFAS by Isotope Dilution (non-potable water) report:	Legacy 24 plus Gen X	2	Wilmington		Sampled 01-24-19 09:50 (local time) Received 01-24-19 14:35 ReceivedTemp 1.2 StorageTemp 4 StorageLocation R1

**This Is The Last Page
Of This Report.**